# Eave Intake or Ridge Exhaust

*Installation Instructions*

## 1. Ridge Exhaust/Lower Intake

Cut a horizontal ⅜" slot in the deck, leaving a minimum of 6" uncut on each end of the slot.

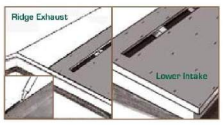


Install felt underlayment, installing past cut slot. Trim felt from slot opening. Caulk edge of felt and shingle up to this point.

## 2. Trimline Multi Roll Vent Installation



Install foam end caps according to diagram. Install Trimline Multi Roll™ Vent along the slot opening with the corrugated air intake placed approximately 1" below the ventilation slot. Tack down the lead edge with a nail. Also tack down at the middle and end of the roll. Pull the StormStop™ membrane tightly toward the top of the roof, lay a bead of caulk 4½" above the slot and below the membrane. Nail down the StormStop membrane and plastic above the slot.

## 3. Caulking

Lay a bead of caulk on front edge of Trimline Multi Roll Vent. Caulk on top and behind the vent. Install felt underlayment on top of the vent (a minimum of 15"). Lap felt from the vent to the ridge. Lay a bead of caulk on the front edge of felt underlayment.

## 4. Tabs Removal

Using a utility knife, remove tabs from shingles. Nail starter course of shingles per manufacturer's installation instructions. Nails should penetrate the wood roof deck at least ¾". Lay a bead of caulk on the front edge of the starter course. Install a minimum of one course of shingles, lapped on top of starter course, over vent.

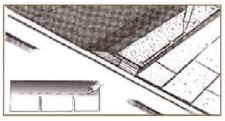

Install remaining shingles per manufacturer's installation instructions.

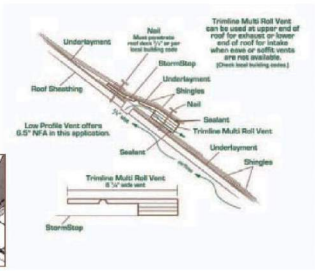


Installation



TRIMLINE
800-438-2920
www.trimline-products.com